



USER


MANUAL

VENERO

SB75

PACKAGE CONTENTS

 - **1 UNIT OF VENERO SB75 SOUNDBAR**
- **1 UNIT OF USER MANUAL**
- **1 UNIT OF WARRANTY CARD**
- **1 UNIT OF TYPE-C CHARGING CABLE**

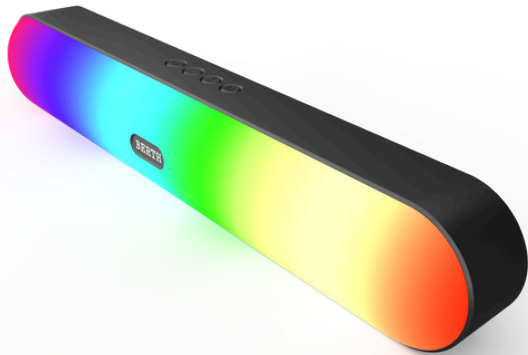

FUNCTIONS

 
- **POWER SWITCH**

Switch On/Off your speaker.

- **WIRELESS MODE**

- Turn on the speaker to enter Wireless Mode.
- On your mobile device, search for "Venero SB 75."
- Select "Venero SB 75" to connect.

NOTE: The speaker will automatically connect to the last paired mobile device if it is within range.

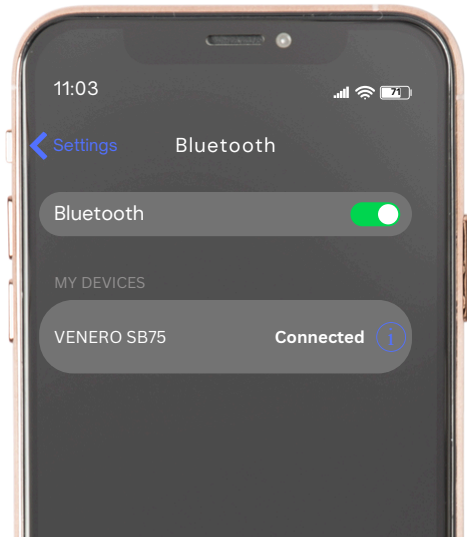

FUNCTIONS

- **AUDIO INPUT**

Use the audio cable to play music directly from your laptop, stereo or other device with 3.5mm headphone output.

- **USB INPUT**

Play music directly from a USB device.

- **MICRO SD (TF)**

Play music directly from your Micro SD card inserted. Micro SD playback begins automatically when Micro SD card is inserted. (When inserting Micro SD Card, keeps pin side on top)



FUNCTIONS

- **DC 5V INPUT**

Use the charging cable to charge your speaker. Connect to a USB adaptor or your laptop.

- **MODE CHANGE BUTTON**

Short press the "M" key to change the mode Wireless –FM/Bluetooth/USB/TF Card.(Long press the “▶||” button for 2-3 second to enter the automatic channel search mode. Use FM channel search, Insert the charging cable into the slot to act as an external antenna to enhance the signal.)

FUNCTIONS

- **VOL-/PREVIOUS SONG**

Long press"—" to play previous song, short press"—" for volume down.

- **VOL+/NEXT SONG**


Long press"+" to play next song, short press"+" for volume up.

- **PLAY/PAUSE**

Short press “▶||” to play/stop playing music.

- **TWS FUNCTION**

Long press the “▶||” button under Bluetooth mode, you can hear “DIDI” sound, it means 2 speakers are connected successfully. They will Auto Link when turn on speaker next time.

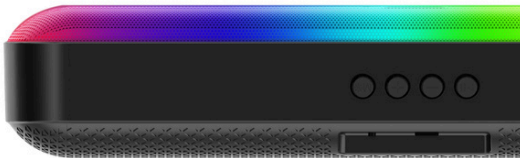 

FUNCTIONS

- **HANDS-FREE DEVICE**

Click the “▶||” button to answer/hang up the call under Bluetooth Mode. Long press the “▶||” button to reject the call. Double-click the “▶||” button to redial the latest number.

- **LED LIGHT**

- Switch On your speaker, led light will turn on.
- Long press “M” adjust led light mode and switch off the led light

TROUBLESHOOTING

 
- **Some terminal music players are without automatic switching play function. In this case, a 'pop' noise may be heard between songs.**
- **If you cannot wireless connect to your mobile device. Try removing the Speaker from your mobile device's saved devices and re-connect as instructed above.**
- **The sound performance may also be affected when there is a weak connection between the mobile device and the speaker. To improve connection, bring the mobile device closer to the speaker or remove any obstacles between the two devices.**
- **The sound performance may also be affected if the battery power level is low on the Speaker. Please make sure the speaker is fully charged to improve this issue.**

NOTE


- Charge the speaker fully before first use.
- The charging time depends on the existing charged levels of the battery and the specifications of the USB adaptor.
- The LED indicator turns off automatically (during charging) when the battery is fully charged.
- The speaker's usage time depends on charge in the battery, mode, volume level, etc.


CHARGING GUIDELINES

- Use only 10W adapters for charging your Soundbar.
- Caution against using high-power mobile adapters (beyond 10W), as this may lead to charger faults.
- Using adapters with higher power ratings can result in malfunctions and reduce the lifespan of device and your chargers.
- Users can contact customer support for any further assistance or clarification on concerns related to charging and power adapters.

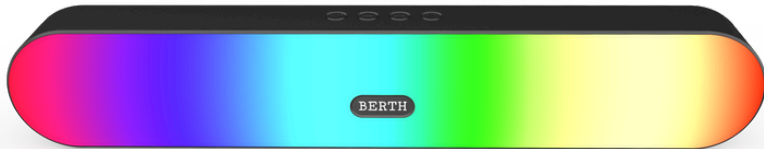



 support@berthaudio.com

 www.berthaudio.com